



Joint & Crack Chaser Saw

Operator's Manual
SAS.SAW09

SASE Company, Inc
2475 Stock Creek Blvd.
Rockford, TN 37853

P | 800.522.2606
F | 865.745.4110
SASECompany.com


SET-UP INSTRUCTIONS

Safety precautions

- Always wear required PPE when operating this saw
- Stay clear of others during operation as debris can fly from blade area causing injury
- Never leave plugged in when unattended, replacing the blade or making any adjustments
- Follow the grinder manufactures manual that is included

Blade installation *(Use same process as the joint saw (photos) for the crack chaser)*

- Tilt unit back
- Remove the blade guard that is held down by the black knob
- Allow the motor to pivot down and install the blade (8 to 10 inch max.)
- Reinstall the guard and pivot the motor up before tilting the saw back to its wheels
- Follow the blade cutting depth instruction that are printed on the pivot decal. Centering the adjustment knob to the center bold line is approximately 1 in of cutting depth with a 10 in blade

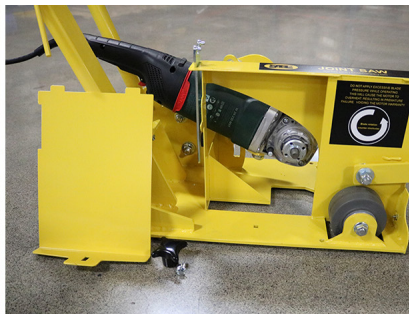

Specifications

Power	120V 15AMP
Cutting Depth	adjustable - 2 1/8"
max	
Weight	70 lbs
Blade	7 -10"


Set-up

- Install the control and lift handles as shown.
- Lightly wrap the cord around the cord holder. DO NOT over tighten the cord as this may cause premature wear to the outer shield.
- Install and adjust the guard to maintain minimal ground clearance. This will assure optimum dust control.
- Plug the grinder into the remote power box.
- Never leave the unit plugged in while unattended or while replacing the blade.



Blade Adjustment

- (A) Blade Adjustment knob. Slide the knob left or right to set the blade depth limit.
- (B) Insert locking pin into position (2) when saw is in use.
- (C) When the saw is not in use make sure to lift motor and insert locking pin into position (3). This locks the motor in the up position for transportation.
- (D) The foot lever is for temporary use only, do not use for transportation or extended periods of time.

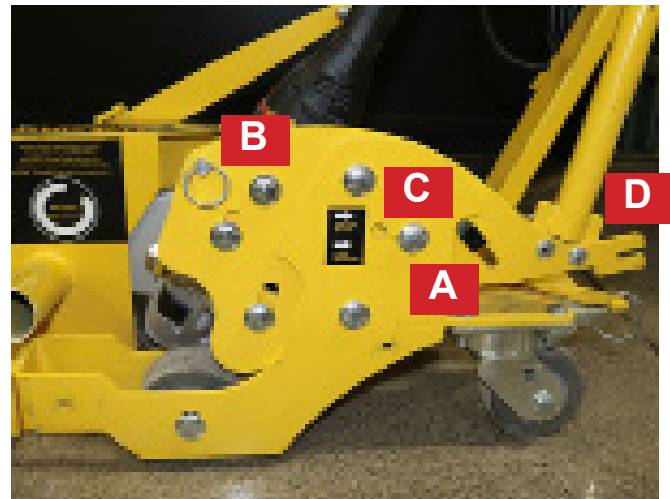

Crack Chasing Mode
unlock as shown



Crack Chasing Mode
unlock as shown